

## INSTALLATION STEPS:



**STEP 1:** INSTALL THE MOUNTING BRACKET TO THE J-BOX.( J-BOX SUPPLIED BY OTHERS).

**STEP 2:** INSTALL THE LENS/GLOBE OVER THE SPRING FITTER CLAMPS AND SECURE WITH THE SCREWS (2) PROVIDED.

**STEP 3:** ONCE THE LENS/GLOBE IS INSTALLED SECURE THE FIXTURE TO THE CANOPY AS SHOWN.

**STEP 4:** ONCE THE CANOPY IS ATTACHED,CONNECT WIRES TO THE POWER SUPPLY.

**STEP 5:** SECURE THE FIXTURE TO THE MOUNTING BRACKET USING THE SCREWS (2) PROVIDED.

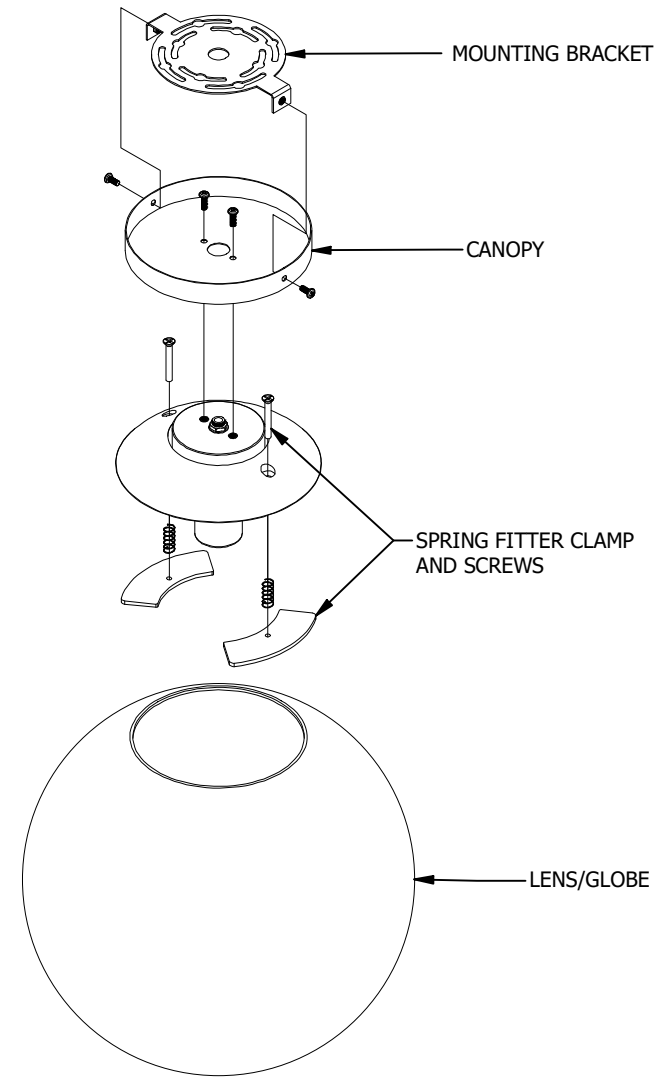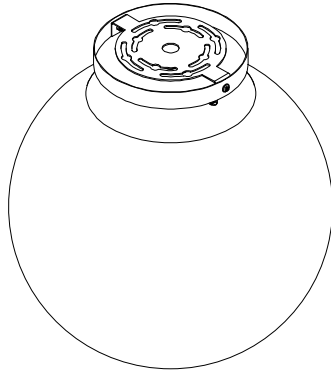

- 1. WARNING - Turn off the power.** Before starting the installation, locate the circuit breaker in the electrical circuit panel and switch the circuit off. *Turning off the light is not sufficient to prevent electrical shock.*
- 2. Remove the old fixture.** If you are replacing an existing fixture, remove all components of the old fixture (cover, mounting plate, etc...), remove the old wire connectors, and expose the supply wiring from the electrical box.
- 3. Connect the wires.** Use a wire stripper to remove the protective coating of the wires. Connect the grounding wire (green or bare copper wire) from the electrical box to the green wire of the fixture. Connect the white wire from the electrical box to the white wire of the fixture. Connect the black wire from the electrical box to the black wire(s) of the fixture.
- 4. IMPORTANT.** Use only *UL Listed* connectors and tape to complete the installation. Carefully read and follow any additional installation instructions provided in this sheet.

**LIGHTWAY INDUSTRIES**

VALENCIA CA 91355

**INSTALLATION  
INSTRUCTIONS**

BY

IanH

DESCRIPTION

**INSTL-INSTRUCTION(WWXC)**

DATE  
5/26/2023

PART NUMBER  
62-267-00

REV  
0